# BEZPEČNOSTNÉ INFORMÁCIE

Tieto pokyny sú rovnaké a platia pre akúkoľvek kušu. AR-Series M10 je výkonný športový nástroj, ktorý môže byť nebezpečný, ak sa používa nesprávne. Pred použitím kuše si dôkladne prečítajte tento návod. Dbajte na bezpečnostné pravidlá pre všetky strelecké športy a najmä dodržujte miestne zákony o držaní a používaní kuší.

Pre vašu bezpečnosť a bezpečnosť ostatných si prečítajte tento návod a riaďte sa ním. Ak ste si tento výrobok zakúpili pre iného používateľa, ste zodpovedný za to, že táto osoba bude s týmto manuálom oboznámená a bude ho dodržiavať. Ak máte akékoľvek otázky ohľadom zostavovania a používania kuše, kontaktujte predajcu alebo výrobcu. Akékoľvek úpravy na produkte okamžite rušia záruku a nárok na reklamáciu.

1. Vaša kuša AR-Series M10 je nebezpečný športový nástroj! Správajte sa k nej ako k nabitej zbrani. Mimoriadna opatrnosť je potrebná pri jej nabíjaní, používaní a prenášaní.

2. Vždy mierte kušou bezpečným smerom. Nikdy nemierte na ľudí, zvieratá alebo čokoľvek, čo nechcete poškodiť. Nemierte kušou ani zo žartu. Mierte iba na ciele, ktoré plánujete zasiahnuť.

3. Narábajte s nenabitou kušou rovnako opatrne ako s nabitou strelnou zbraňou. Obe môžu spôsobiť vážne zranenie alebo smrť. Vaša kuša môže zraniť vás alebo iných. Pred každým použitím ju skontrolujte.

4. Vaša kuša AR-Series M10 nemá manuálnu poistku. Z tohto dôvodu ju naťahujte len tesne pred streľbou a nikdy nenechávajte natiahnutú. Nedávajte prst na spúšť, kým nie ste pripravení strieľať.

5. TETIVA sa pohybuje vysokou rýchlosťou a môže spôsobiť vážne zranenia. Uistite sa, že žiadne časti tela, odevu alebo iné predmety nie sú v dráhe tetivy. Podpera (napr. ruka) musí byť pod dráhou tetivy.

6. Rameno kuše sa pohybuje dopredu pri výstrele. Uistite sa, že v jeho dráhe nie sú prekážky. Ak narazí na prekážku, môže dôjsť k poškodeniu alebo zraneniu.

7. Pri lezení cez prekážky alebo pri výstupe na posed sa uistite, že kuša nie je natiahnutá. Odporúčame nenaťahovať kušu, kým nie ste pripravení strieľať.

8. Nikdy kušu nijako neupravujte! Úpravy najmä spúšťového mechanizmu môžu byť veľmi nebezpečné a môžu spôsobiť poruchu kuše.

9. Pred a po použití skontrolujte kušu na uvoľnené skrutky, poškodenie alebo opotrebovanie (najmä tetivy a ramená). Opotrebované časti vymeňte pred ďalším použitím.

10. Vybite kušu, ak neplánujete strieľať. Nikdy nenechávajte kušu natiahnutú, ak ju neplánujete okamžite použiť.

11. Nikdy neskúšajte „naprázdno vystreliť“ (bez šípu). Môže to spôsobiť poškodenie kuše a zranenie používateľa. Pri nabíjaní dávajte pozor, aby ste šíp umiestnili správne.

12. Dbajte na to, aby šípy neboli poškodené a aby boli vhodne nainštalované. Poškodený šíp alebo nesprávny uhol môžu spôsobiť poruchu a zranenie.

13. Deti smú používať kušu len pod dohľadom dospelej osoby. Kuša nie je hračka.

14. Nikdy nestrieľajte do tvrdých povrchov alebo vody. Šíp sa môže odraziť a zraniť vás alebo iných.

15. Nedávajte kušu ani šípy do vlhkého prostredia. Vlhkosť môže poškodiť kušu a znížiť jej životnosť.

16. Vaša kuša bola navrhnutá na rekreačné použitie a presnú streľbu. Nesmie sa používať ako zbraň proti ľuďom alebo zvieratám mimo povoleného lovu.

# SAFETY INFORMATION

These instructions are the same as apply to any crossbow. An AR-Series M10 is identical to a conventional crossbow in terms of the dangers and legal regulations. When using this very compact crossbow, be sure to follow the general safety rules for all shooting sports and especially be sure to follow your local regulations about using crossbows.

For your own safety and the safety of others, read this entire owner's manual carefully before you use this product for the first time. You as the user are responsible for being sure of and complying with all laws and other regulations about the use of crossbows in your country and state. You may not alter this product. Any modifications to the product will immediately void the warranty and manufacturer's guarantee..

1. Your AR-Series M10 is a dangerous sporting arm! Treat your crossbow with the same respect that you must apply when handling a loaded firearm.
2. Always point your crossbow in a safe direction. Never point your crossbow at people, animals, or objects that you do not wish to damage, not even unintentionally or when playing. Only point your crossbow at targets you intend to shoot!
3. Treat a cocked crossbow in the same way as a loaded firearm. Both are capable of causing serious injury or death! Your crossbow can cause injury with or without a bolt on the deck.
4. Your AR-Series M10 has no manual trigger safety! Because of this, only cock this product immediately before you intend to fire, and never transport your crossbow in a cocked state. Do not place your finger on the trigger until you intend to fire.
5. The string of your crossbow moves at a very high speed and can cause serious damage or injury. For this reason, you must be sure that there are no obstructions, objects, or body parts in the path of the string. This especially means that your support hand must be below the crossbow deck at all times. You should ideally place your support hand on the included vertical forend grip.
6. The limbs move forward at a high speed when you fire your crossbow. You must be sure that there are no obstacles in the path of the limbs, as contact between the limbs and an obstacle during firing can damage or destroy the limbs and cause injury to animals or people.
7. When climbing over obstacles or climbing into a hunting stand, make sure that your crossbow is not cocked. We recommend not cocking your crossbow until immediately before you intend to fire.
8. Never modify your crossbow under any circumstances! Trigger modifications in particular can render your crossbow unsafe.
9. Inspect your crossbow for loose fasteners, visible damage, or worn parts (especially the string) before and after each use. Be sure to replace any worn parts before the next use. Do not use your crossbow under any circumstances if the string is damaged!
10. Uncock your crossbow if you did not have an opportunity to fire or if you no longer intend to fire. Do not store your crossbow in a cocked state.
11. Never fire your crossbow without a bolt (this is called dry firing). This can damage your crossbow and cause injury. When loading bolts into the magazine, inspect the bolts for damage. Never use damaged bolts.
12. Note that bolts that strike a target at an angle may be deflected. Such ricochets can be very dangerous.
13. Children may only use this product under adult supervision. In such instances, the adult bears full responsibility.
14. Safety glasses should always be worn when shooting.
15. Always ensure that you have a suitable backstop that will catch all bolts that you fire. The bolts that are fired from this crossbow can penetrate many objects and materials to a considerable depth or even pass through them.
16. Your crossbow has an internal compartment for various optional accessories. A laser sight is also available for this accessory compartment. If this laser is installed, be sure to never look into the laser emitter, and never point the laser at anyone's eyes (people or animals)! The laser can cause serious eye injuries or permanent blindness. Be careful when pointing the laser at reflective surfaces such as mirrors, windows, or polished metal surfaces.

MORE INFORMATION ABOUT SAFETY INSTRUCTIONS CAN BE FOUND HERE
STEAMBOW.AT/FAQ/M10-SAFETY

STEAMBOW

AR-SERIES M10 TACTICAL

# GEBRAUCHSANWEISUNG
# *OWNER'S MANUAL*

## 1 / FIRST STEPS
PRVÉ KROKY











SCAN THE QR-CODE AND WATCH THE DETAILED ASSEMBLY INSTRUCTIONS
*STEAMBOW.AT/M10-FAQ*

## 2 / GETTING STARTED
ZAČÍNAME



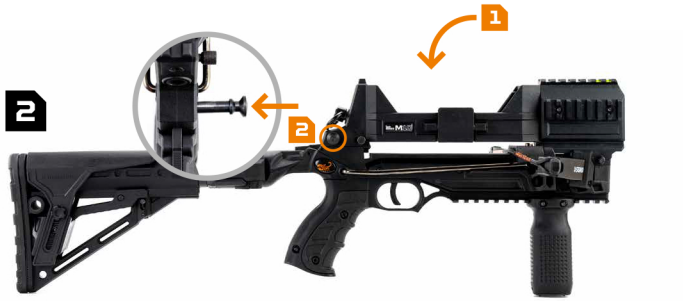



## 3 / SHOOTING
STREĽBA







