
65*90mm 120g铜版纸覆亚膜 双面印刷

SKYWOODS
sights conquer the outdoors

Tactical Light & Laser Combo

PL800

User Manual

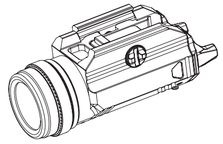

Thank you for selecting tactical flashlight and laser combo. Please read this manual before use.The manual in cludes important safety and operation instructions,please well save it for future reference.

Specfication

LED	1*W5050-SR2
Max Brightness	800 Lumens
Run Time	Only light(100% brightest) : 1.5 hour Only laser : 32 hour Light + laser : 1 hour Light strobe = 2.5 hour
Beam Distance	250m
Beam Intensity	15800cd
Color Temp	6000-7000k
Beam Angle	＞14°
Impact Resistance	1m
Waterproof	IPX5
Battery	1*143036/1500mAh
Dimension	35.6*38.8*90.7mm±0.5
Net weight	132±5g(with battery)

INSIDE THE BOX




① ② ③ ④ ⑤


① Tactical Light ② Slotted Screwdriver ③ Allen Key
④ USB-C Charging Cable ⑤ User’ s Manual

Product Overview


Material : Aluminum alloy construction structure,lever-3 hard anodizing.

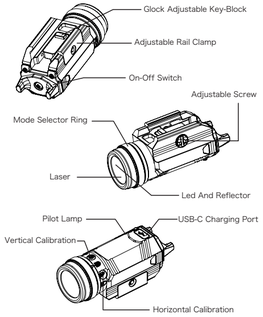

Adjustable Rail Clamp System




Charging Procedure

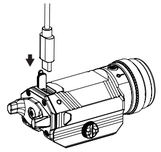

Built in rechargeable battery and USB input port:open the rubber cover and get one head of charging cable connected and other end inserted into all USB powered devices.

Mounting & Removal

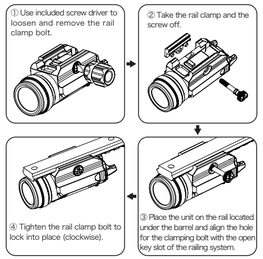

How To Use ：

This model has both strobe and solid light effect,operations as below :
① Momentary high beam and strobe light
Press down the rotary switch on left side for 1st time to light up (100%) , then WITHIN 1 SECOND to press the rotary switch on left side for 2nd time , the tactical light will turn on strobe light.



Notice:Press the rotary switch quickly and alternately within 1 second to change the light modes.


② Constant high beam and strobe light (Rotate the ring on head to light)
Constant high beam: Press down the rotary switch on right side, the tactical light will light up (100%) constantly, press the rotary switch back to turn off tactical light.
Constant strobe: Press down the rotary switch on right side, with in 1 second to switch off the light then switch on the light quickly by pressing down the rotary switch on right side, the tactical light will turn to strobe constantly.



③ Constant high beam and laser combo (Rotate the ring on head to light & laser)
Constant high beam and laser combo: Press down the rotary switch on right side, the tactical light and laser will light up (100%) constantly, press the rotary switch back to turn off tactical light and laser.
Constant strobe light and laser combo: Press down the rotary switch on right side, with in 1 second to switch off then switch on the light quickly, by pressing down the rotary switch on right side, the tactical light and laser combo will turn to strobe constantly.


④ Constant laser (Rotate the ring on head to laser)
Constant laser: Press down the rotary switch on right side, the laser will light up constantly, press the rotary switch back to turn off laser.
Constant strobe laser combo: Press down the rotary switch on right side, with in 1 second to switch off the laser then switch on the laser quickly by pressing down the rotary switch on right side, the laser will turn to strobe constantly.

⑤ Mode Select
Select white light only, white light & laser combo, laser only, by rotating the select ring on the head easily.



Laser Adjustment

Use the included hex wrench to rotate the adjustment screws on the side of the light to calibrate the vertical or horizontal angle of the laser, and finally sight in the laser for accurate use.

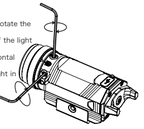

Cautions

DO NOT stare into the laser beam.
DO NOT look into the laser beam through binoculars or telescopes.
DO NOT point the beam at mirror-like surfaces.
DO NOT point the laser beam into or near anyone's eyes.
DO NOT point the laser at any person, animal, or moving vehicle.

Warranty

Within 30 days of purchase : Return to retailer from which you purchased for repair or replacement.

Within 5 years of purchase : Return to factory for repair or replacement.

This warranty does not cover normal wear and tear, modifications, misuse, disintegrations, negligence , accidents, improper maintenance, or repair by anyone other than an authorized retailer.


THANK YOU !

MADE IN CHINA

SKYWOODS
sights conquer the outdoors

Merci d'avoir choisi notre lampe de poche tactique SKYWOODS

A61230

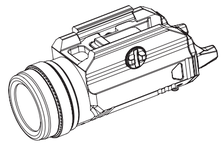

Veuillez lire ce manuel avant utilisation. Il contient des informations importantes. Les instructions d'utilisation et de sécurité doivent être conservées.

Specfication

LED	1*W5050-SR2
Luminosité	800 Lumens
Durée d'utilisation	Lumière seule : 1H30 Laser seul : 32H Lumière+Laser : 1H Stroboscope: 2H30
Distance du faisceau	250m
Intensité faisceau	15800cd
Température de couleur	6000-7000k
Angle du faisceau	＞14°
Résistance d'impact	1m
Waterproof	IPX5
Battery	1*143036/1500mAh
Dimension	35.6*38.8*90.7mm±0.5
Poids	132 grs avec batteries
Référence fabricant	L53180
Référence Distributeur	A61230


Inclus Dans Cette Boîte



① ② ③ ④ ⑤

① La Lampe ② Mini Tournevis ③ Clef Allen
④ Câble USB C ⑤ Le Manuel

Chargement Pour Ce Produit :

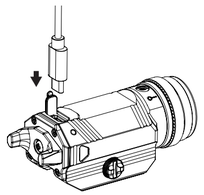

① Ce produit dispose d'une batterie 1500mAh rechargeable par un port USB C
② Rechargez facilement grâce au câble USB C inclus. Connectez-le à un chargeur mural ou à une batterie externe.

Fonctionnement :

Ce modèle possède 3 fonctions changeables par un switch arrière : lampe, laser ou stroboscope. Les différents modes se situent à la tête de la lampe, grâce à une bague, sélectionner le mode souhaité :

① Tourner le switch arrière de la lampe du coté gauche pour allumer la lampe et dans la seconde tourner à gauche à nouveau pour activer le mode stroboscope par intermittence.




② Sur la bague , sélectionner le mode "lampe" : Tourner du côté droit pour allumer la lampe et revenir à la position initiale pour éteindre.



③ Sur la bague, sélectionner le mode " lampe+laser" . Tourner du côté droit pour allumer la lampe+laser et rapidement l'éteindre puis la rallumer vers la droite pour activer le mode stroboscope constamment.


④ Sur la bague, sélectionner le mode " laser " . Tourner du côté droit pour allumer le laser en continue et rapidement l' éteindre puis la rallumer vers la droite pour activer le mode laser stroboscope.

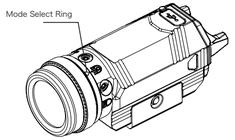


Ajustement du laser

① Utiliser la clef Allen et tourner la vis latéral pour ajuster la hauteur du laser verticalement ou horizontalement. Ne pas forcer.

② Utiliser la clef Allen et tourner la vis au-dessus pour ajuster la performance et le faisceau du laser. Ne pas forcer de trop.

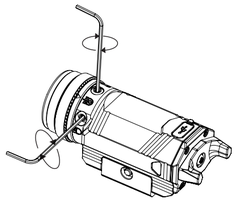

Fixation Et Démontage

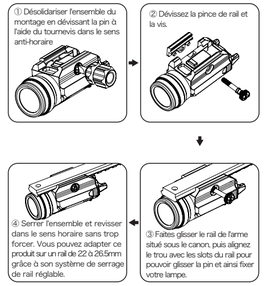

Cautions

· NE dirigez PAS la lumière directement vers les yeux. Cela peut causer des dommages temporaires ou permanents, entrainant la cécité. NE regardez PAS le laser avec vos yeux ou à travers un télescope ou binoculaire. NE pointez PAS le laser sur un miroir ou une surface pouvant réfléchir le laser. NE PAS diriger le laser vers les yeux de d’ autres personnes, un animal ou un véhicule en mouvement.
· NE chargez PAS ce produit avec d'autres câbles de chargement, sauf celui inclus dans l'emballage d'origine.
· NE PAS couvrir la tête de la lampe, et ne pas placer la tête de la lampe sur le sol lorsque la lumière est allumée. L'énergie de rayonnement de la lumière peut causer des dommages sur la lampe ou provoquer des brûlures sur des matériaux en contact.
· NE PAS laisser la lampe dans un sac plastique ou un autre récipient plastique sous haute température.
· Tenir hors de portée des enfants

Laser Class II, norme EN60825-1 :2014 – P < 1mW – Faisceau 520nm

La garantie en France est de 2 ans (date d’ achat) pour des défauts de fabrication. La garantie ne fonctionnera pas en cas de modifications du produit, de négligences, des réparations par des personnes non qualifiées et par non suivi des consignes citées dans ce manuel d’ utilisation.
Produit fabriqué en Chine. Importé et distribué en France par Sn Europarm
· info@europarm.fr

Laser Class II, norme EN60825-1 : 2014 – P< 1mW – Faisceau 520nm